



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services



Solutions

## Technical Information

# Ceraliquid CPS42/CPS42D/CPS43

ORP electrodes, analog and digital with Memosens technology and reference electrode

Each with ceramic diaphragm and liquid KCl electrolyte



### Application

Media with very low conductivities or a high percentage of organic solvents or alcohols:

- Food industry
- Biotechnology
- Laboratory measurements
- Power plants



With ATEX, FM<sup>1</sup> and CSA<sup>1</sup> approval for application in hazardous areas

### Your benefits

- Liquid KCl electrolyte enabling use at very low conductivities
- Ceramic diaphragm with defined KCl flow
- Application under pressures of up to 10 bar / 145 psi with counter pressure
- Resistant to poisoning thanks to separate reference lead
- Suitable for CIP / SIP cleaning
- Three lengths available: 120, 225 and 425 mm / 4.72, 8.86 and 16.73 inches

### Further benefits offered by Memosens technology

- Maximum process safety through contactless inductive signal transmission
- Data safety through digital data transmission
- Easy handling due to storage of sensor-specific data
- Predictive maintenance possible thanks to registration of sensor load data

<sup>1</sup> approval for digital sensors pending

## Function and system design

### Measuring principle

#### Redox measurement

The redox potential is a unit of measurement for the state of equilibria between oxidising and reducing components of a medium. Redox potential is measured similarly to the pH value. A platinum or gold electrode is used instead of pH-sensitive membrane glass. Analog to the pH measurement, an integrated Ag/AgCl reference system is used as a reference electrode.

### General properties

#### ■ Application at low conductivity

Thanks to its liquid KCl electrolyte filling, the CPS42 can be applied at very low conductivities ( $\geq 5 \mu\text{S}/\text{cm}$ ).

#### ■ Sterilisable

The electrode can be used in applications with steam sterilisation (max. 130 °C / 266 °F).

#### ■ Durability

The electrode can be applied under pressures of up to 10 bar / 145 psi with counter pressure.

### Important properties CPS42D

#### Maximum process safety

The inductive and non-contacting measured value transmission of Memosens guarantees maximum process safety and offers the following benefits:

- All problems caused by moisture are eliminated.
  - The plug-in connection is free from corrosion.
  - Measured value distortion from moisture is not possible.
  - The plug-in system can even be connected under water.
- The transmitter is galvanically decoupled from the medium. The result: No more need to ask about "symmetrically high-impedance" or "unsymmetrical" or an impedance converter.
- EMC safety is guaranteed by screening measures for the digital measured value transmission.

#### Data safety through digital data transfer

The Memosens technology digitalizes the measured value in the sensor and transfers it to the transmitter via a contactless connection. The result:

- An automatic error message is generated if the sensor fails or the connection between sensor and transmitter is interrupted.
- The availability of the measuring point is dramatically increased by immediate error detection.
- The digital signals are suitable for application in hazardous areas; the integrated electronics are intrinsically safe.

#### Easy handling

Sensors with Memosens technology have integrated electronics that allow for saving calibration data and further information such as total hours of operation and operating hours at very high temperatures. When the sensor is mounted, the calibration data are automatically transferred to the transmitter and used to calculate the current redox potential. Storing the calibration data in the sensor allows for calibration and adjustment away from the measuring point. The result:

- The sensors can be calibrated under optimum external conditions in the measuring lab. Wind and weather do neither affect the calibration quality nor the operator.
- The measuring point availability is dramatically increased by the quick and easy replacement of precalibrated sensors.
- The transmitter does not need to be installed close to the measuring point but can be placed in the control room.
- Maintenance intervals can be defined based on all stored sensor load and calibration data and predictive maintenance is possible.
- The sensor history can be documented on external data carriers and evaluation programs at any time. Thus, the current application of the sensors can be made to depend on their previous history.

#### Communication with the transmitter

Always connect the digital sensor to a digital transmitter with Memosens technology. Data transmission to an analog transmitter is not possible.

**Data storage of the CPS42D**

Digital sensors are able to store the following system data in the sensor.


- Manufacturing data
  - Serial number
  - Order code
  - Date of manufacture
- Calibration data
  - Calibration date
  - Calibrated offset (operating mode "mV")
  - % slope (operating mode "%")
  - Number of calibrations
  - Serial number of the transmitter used for the last calibration
- Application data
  - Temperature application range
  - Redox application range
  - Date of first commissioning
  - Operating hours

These system data can be displayed with the Mycom S or the Liquiline M CM42 transmitter.

**Measuring system**

A complete measuring system comprises:

- CPS42 or CPS42D ORP electrode
- Transmitter, e.g. Liquisys M CPM223/253 (with Memosens technology for CPS42D)
- Special measuring cable, e.g. CPK9 or CYK Memosens data cable for CPS42D
- Immersion, flow or retractable assembly, e.g. Unifit H CPA441

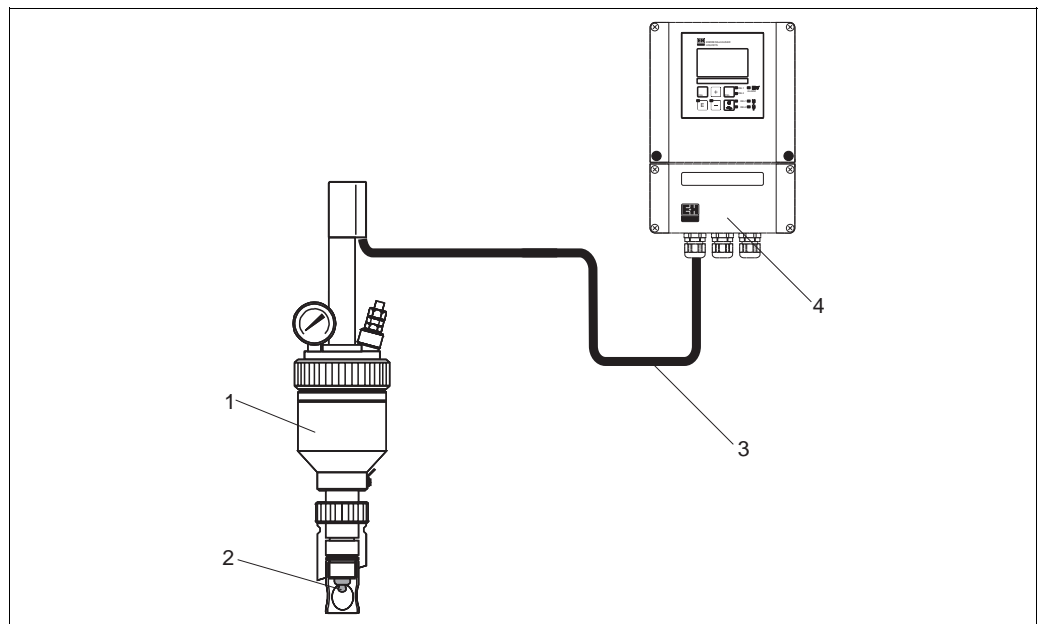

*Measuring system for redox measurement*

- 1 Unifit H CPA441
- 2 CPS42 or CPS42D ORP electrode
- 3 CPK9 special measuring cable (for electrodes with TOP68 plug-in head) / CYK10 for digital sensors
- 4 Liquisys M CPM253 transmitter

**Input**

**Measured variables**

Redox potential

**Measuring range**

-1500 ... 1500 mV



Caution!  
Please note the process operating conditions.

## Installation


### Installation instructions

Do not install the electrode upside down. The inclination angle must be at least 15° from the horizontal. A smaller inclination angle is not permitted as such an inclination results in air cushion forming. This might impair the contact of reference and metal lead.



#### Caution!

- Make sure that the assembly's threaded connection for the electrode is clean and well running before installing the electrode.
- Hand tighten the electrode (3 Nm)! (Given value only applies to installation in Endress+Hauser assemblies.)
- Make sure to follow the installation instructions in the operating instructions of the used assembly.

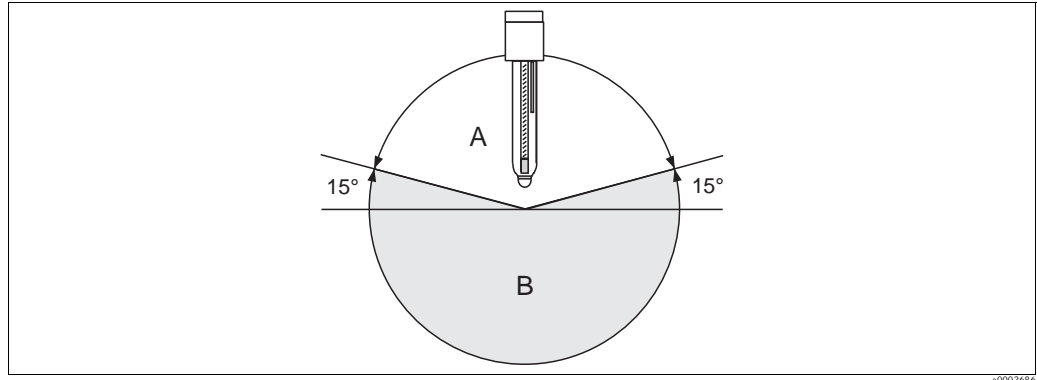

Electrode installation; inclination angle min. 15° from the horizontal

A Permitted inclination angle

B Non-permitted inclination angle

## Environment

### Ambient temperature



#### Caution!

*Danger of frost damage*

Never use the electrode at temperatures below -15 °C / 5 °F.

### Storage temperature

0 ... 50 °C / 32 ... 122 °F

### Ingress protection

IP 67: GSA/SSA plug-in head (with closed plug-in system)  
 IP 68: TOP68 plug-in head (1 m / 3.28 ft water column, 50 °C / 122 °F, 168 h)  
 IP 68: Memosens plug-in head (10 m / 32.8 ft water column, 25 °C / 77 °F, 45 days, 1 M KCl)

## Process

### Process temperature

CPS42, CPS43: -15 ... 130 °C / 5 ... 266 °F  
 CPS42D: -15 ... 135 °C / 5 ... 275 °F


### Process pressure

0 ... 10 bar / 0 ... 145 psi with counter pressure via a separate KCl vessel

### Application


CPS42, CPS42D: Reducing media, e.g. chromate reduction, chlorine dosing in swimming pools  
 CPS43: Single reference electrode, used in combination with the CPS64 single pH electrode

**KCl consumption**

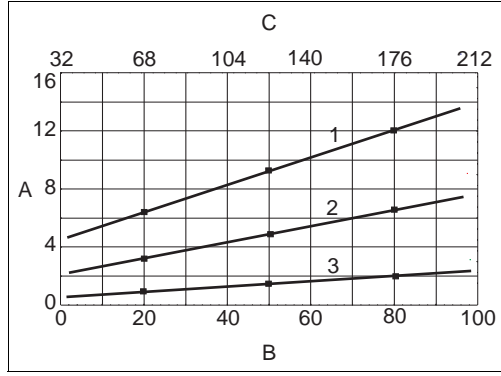

*KCl consumption dependent on medium temperature*

- A KCl consumption (ml/d)
- B Temperature (°C)
- C Temperature (°F)
- 1 800 mbar / 11.6 psi overpressure
- 2 400 mbar / 5.8 psi overpressure
- 3 100 mbar / 1.5 psi overpressure

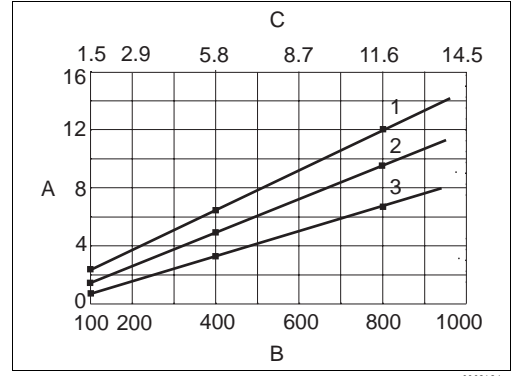


*KCl consumption dependent on process pressure*

- A KCl consumption (ml/d)
- B Overpressure to process (mbar)
- C Overpressure to process (psi)
- 1 Medium temperature 80 °C / 176 °F
- 2 Medium temperature 50 °C / 122 °F
- 3 Medium temperature 20 °C / 68 °F


**Mechanical construction**

**Design, dimensions CPS42**

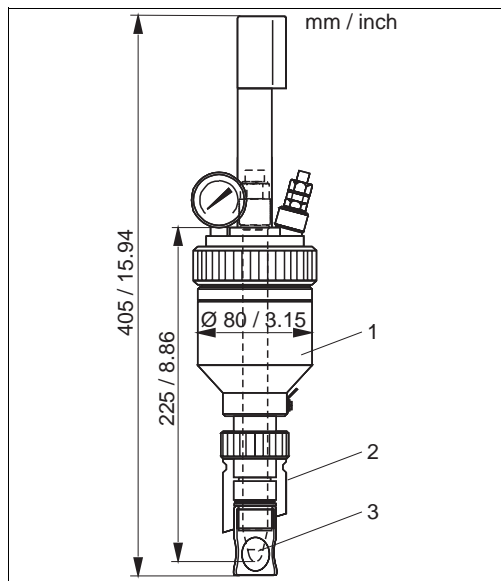



*Unifit H CPA441 with CPS42 with GSA plug-in head*

- 1 KCl reservoir
- 2 Mounting device
- 3 CPS42 (shaft length: 225 mm / 5.91")

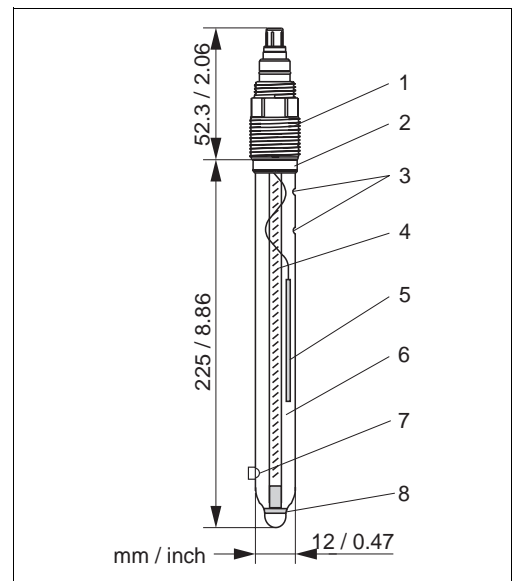

*CPS42 with ESA plug-in head for CPA441*

- 1 TOP68 plug-in head Pg 13.5
- 2 Viton O-ring with thrust collar
- 3 KCl refilling
- 4 Inner metal lead
- 5 Ag/AgCl lead for the reference
- 6 Liquid KCl electrolyte
- 7 Ceramic diaphragm
- 8 Platinum ring

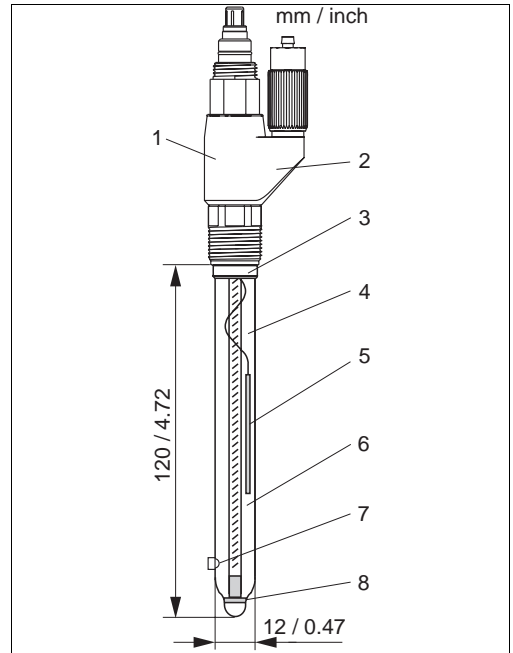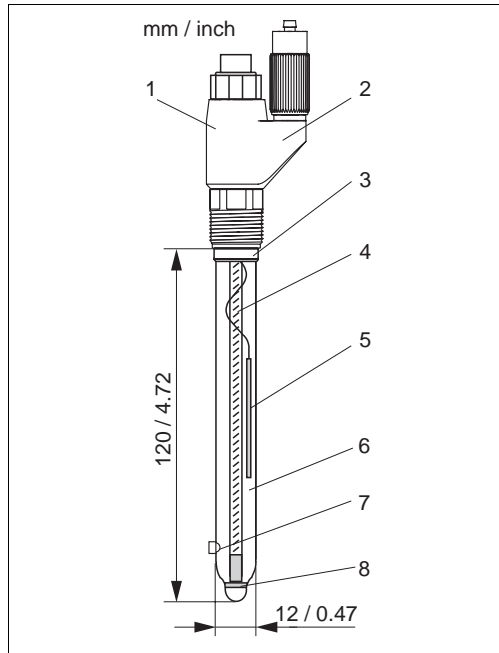



CPS42 with SSA plug-in head

- 1 SSA plug-in head, Pg 13.5
- 2 Hose connection for KCl refilling
- 3 Viton O-ring with thrust collar
- 4 Inner metal lead
- 5 Ag/AgCl lead for the reference
- 6 Liquid KCl electrolyte
- 7 Ceramic diaphragm
- 8 Platinum ring

CPS42 with ESS plug-in head

- 1 ESS plug-in head, Pg 13.5
- 2 Hose connection for KCl refilling
- 3 Viton O-ring with thrust collar
- 4 Inner metal lead
- 5 Ag/AgCl lead for the reference
- 6 Liquid KCl electrolyte
- 7 Ceramic diaphragm
- 8 Platinum ring

**Design, dimensions CPS42D**

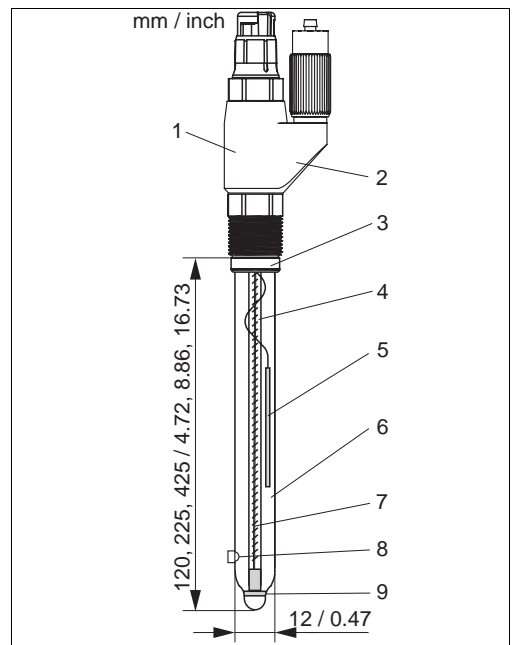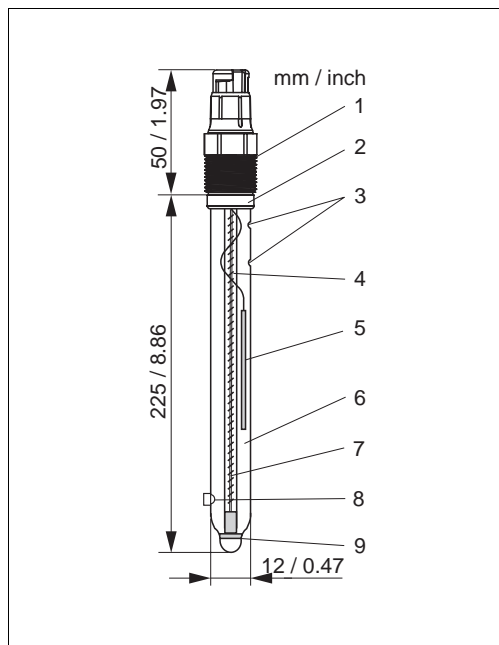



CPS42D with Memosens plug-in head

- 1 Memosens plug-in head
- 2 Viton O-ring with thrust collar
- 3 KCl refilling
- 4 Inner metal lead
- 5 Ag/AgCl lead for the reference
- 6 Liquid KCl electrolyte
- 7 NTC 30K temperature sensor
- 8 Ceramic diaphragm
- 9 Platinum ring

CPS42D with Memosens plug-in head and KCl connection

- 1 Memosens plug-in head
- 2 Hose connection for KCl refilling
- 3 Viton O-ring with thrust collar
- 4 Inner metal lead
- 5 Ag/AgCl lead for the reference
- 6 Liquid KCl electrolyte
- 7 NTC 30K temperature sensor
- 8 Ceramic diaphragm
- 9 Platinum ring

**Design, dimensions CPS43**

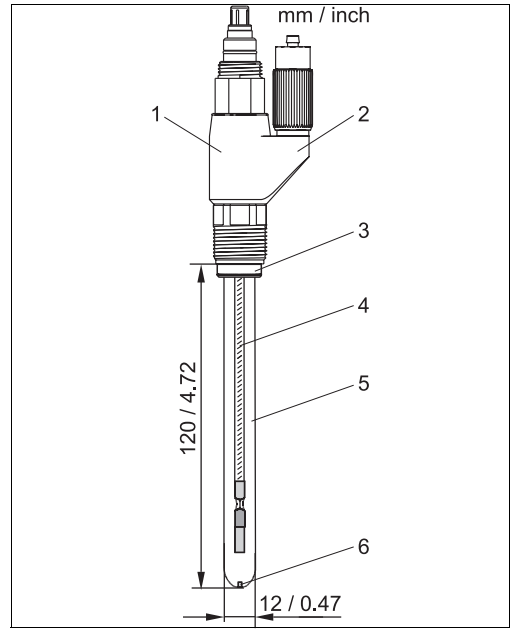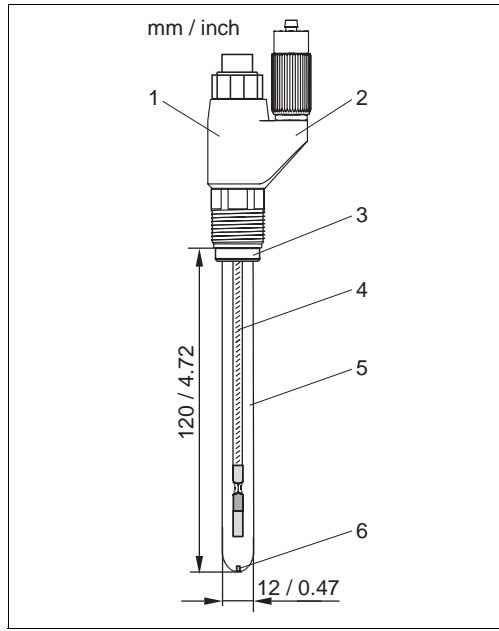

*CPS43 with SSA plug-in head*

- 1 SSA plug-in head, Pg 13.5
- 2 Hose connection for KCl refilling
- 3 Viton O-ring with thrust collar
- 4 Ag/AgCl reference lead
- 5 Liquid KCl electrolyte
- 6 Ceramic diaphragm

*CPS43 with ESS plug-in head*

- 1 ESS plug-in head, Pg 13.5
- 2 Hose connection for KCl refilling
- 3 Viton O-ring with thrust collar
- 4 Ag/AgCl reference lead
- 5 Liquid KCl electrolyte
- 6 Ceramic diaphragm

**Weight** 0.1 kg / 0.2 lb.

**Material**

Electrode shaft	process glass
Redox measuring element	platinum ring
Diaphragm	ceramic diaphragm, sterilisable

**Process connection** Pg 13.5

**Plug-in heads**

CPS42:	
ESA:	threaded plug-in head Pg 13.5, TOP68, 16 bar / 232 psi, Ex
ESS:	hose connection Pg 13.5, TOP 68, 10 bar / 145 psi, Ex
GSA:	threaded plug-in head Pg 13.5
SSA:	hose connection Pg 13.5
CPS42D-****A*:	Memosens plug-in head for digital, contactless data transmission, 16 bar / 232 psi, Ex and non-Ex
CPS42D-****B*:	Memosens plug-in head with hose connection for KCl refilling, for digital, contactless data transmission, 10 bar / 145 psi, Ex and non-Ex

**Reference system** Ag/AgCl metal lead with liquid KCl, 3 M, AgCl free

## Certificates and approvals

**Ex approval CPS42 (ESA, ESS)**

- ATEX II 2G EEx ia IIC T3/T4/T6
- FM Class I Div. 2, in combination with the Mypro CPM431 and Mycom S CPM153 transmitters

**Ex approval CPS42D**

- ATEX II 2G EEx ia IIC T3/T4/T6
- FM<sup>a</sup> / CSA<sup>a</sup> I Div. 2, in combination with the Liquiline M CM42 and Mycom S CPM153 transmitters



Note!

Ex versions of digital sensors with Memosens technology are indicated by an orange-red ring in the plug-in head.

**Biocompatibility** Biocompatibility validated according to:

- ISO 10993-5:1993
- USP, current revision

**TÜV certificate TOP68 and Memosens plug-in heads** Pressure resistance 16 bar, min. triple overpressure safety

**Electromagnetic compatibility of CPS42D** Interference emission and interference immunity complies with EN 61326: 1997 / A1: 1998

## Ordering information

### Product structure CPS42

Electrode type	
0	Standard version
Measuring element	
PB	Platinum ring
Shaft length	
2	120 mm / 4.72" (ESS and SSA plug-in heads only)
4	225 mm / 8.86" (ESA and GSA plug-in heads only)
Plug-in head	
ESA	Plug-in head Pg 13.5, TOP68, 16 bar / 232 psi, Ex
ESS	Hose connection Pg 13.5, TOP68, 16 bar / 232 psi, Ex
GSA	Plug-in head Pg 13.5
SSA	Hose connection Pg 13.5
CPS42-	complete order code

### Product structure CPS42D

Version	
0	Basic version, max. 135 °C / 275 °F
Measuring element	
PB	Platinum ring
Shaft length	
2	120 mm / 4.72" (versions with KCl hose connection only)
4	225 mm / 8.86"
6	425 mm / 16.73" (versions with KCl hose connection only)
Electrolyte supply	
A	Shaft hole KCl refilling, CPA441
B	KCl hose connection, CPY7
Approval	
1	Non-hazardous areas
G	ATEX II 2G EEx ia IIC T3/T4/T6
CPS42D-	complete order code

a) approval pending

## 广州晋合水处理设备有限公司



地 址：广东省广州市海珠区工业大道333号华新园区7幢218  
电 话：020-88191905  
传 真：020-61139917  
邮 编：510300  
邮 箱：jinhewater@jinhewater.com  
网 址：<http://www.jinhewater.com>

**Endress+Hauser**   
People for Process Automation